



MINI CHILLER PACKAGE

INSTALLATION / OPERATION INSTRUCTIONS

1. Wire power source to chiller control panel 12 hours prior to start-up (do not turn on system) to warm up crank case heater. Allow in-put power to stay on.
2. Pipe chiller outlet to coils or heat exchanger and return to surge tank. (see *Cooling of Plating Solutions* on website)
3. Fill PVC surge tank with coolant (water OK) and prime system to proper level (approx 6" from top of tank).
 - a. NOTE: thermostat is factory set at 45 degrees F for 70 degree F. operation but for future reference do not set below 40 degrees F.
4. Do not allow pump to run dry or vortex.
5. Sequence of operation:
 - i. Turn on water pump with toggle switch.
 - ii. Turn on cooling with toggle switch.

Call Camac with any additional questions.



18 Gail Court, Sparta, NJ 07871 • 973-300-5575 • FAX 973-300-5576 www.camacindustries.com

THE LEADER IN CUSTOMER SERVICE **camac** INDUSTRIES