

166P through 666P All-Plastic Motor Mount Kit Instructions

A = Face Plate
B = Standoffs
C = Screws
D = Top Plate




Step 1:
Place Face Plate (A)
onto the C-Face of
motor



**Step 2:
Align Standoffs (B)
with the motor
bolt holes**



**Step 3:
Place Top Plate (D)
on standoffs**

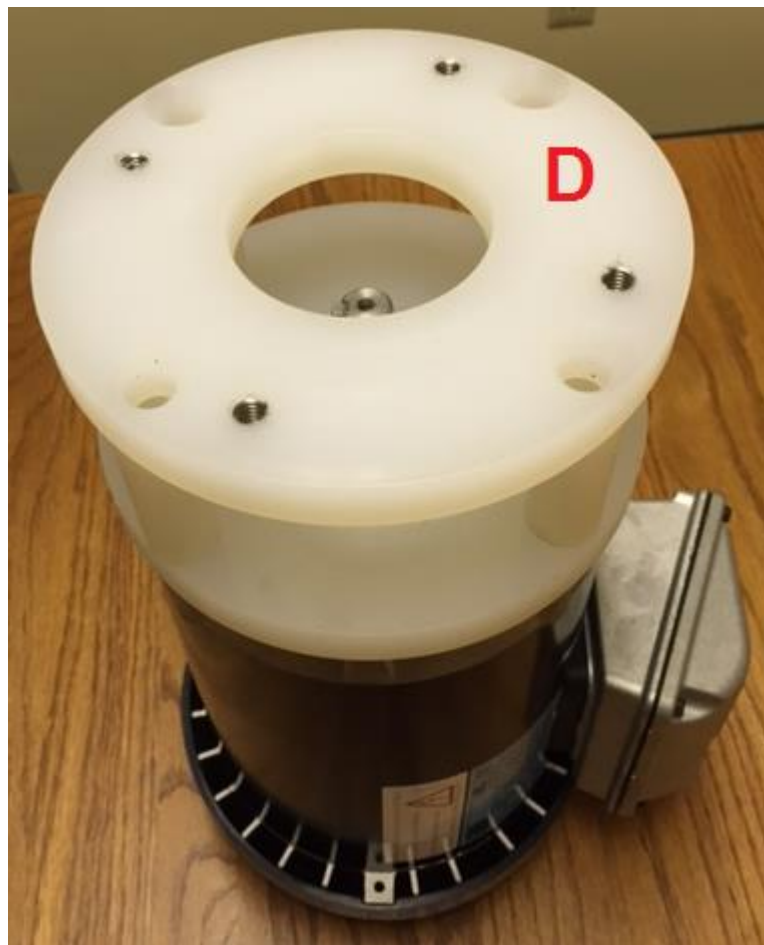

Step 4:
Insert Bolts (C)
through top plate
holes, standoffs and
face plate holes and
screw down all parts
onto motor C-Face
tightly.



Mount complete. Assemble pump per instructions.

