




MINI CHILLER PACKAGE

INSTALLATION / OPERATION INSTRUCTIONS

1. Wire power source to chiller control panel 24 hours prior to start-up (do not turn on system) to warm up crank case heater.
2. Fill PVC surge tank with coolant (water OK) and prime system to proper level (approx 6" from top of tank).
 - a. NOTE: thermostat is factory set at 45 degrees F for 70 degree F. operation but for future reference do not set below 40 degrees F.
3. Pipe process bath to acid pump and back to process from plate and frame heat exchanger.
 - a. NOTE: Do not allow either pumps to run dry or vortex.
4. Sequence of operation:
 - i. Turn on water pump with toggle switch.
 - ii. Turn on cooling with toggle switch.
 - iii. Turn on acid pump with toggle switch.
5. Adjust (massage) flow rate of acid pump with discharge valve to approximately 15 GPM. Water pump has been factory set.
6. Go to www.camacindustries.com for acid pump and plate and frame heat exchanger information.

Call Camac with any additional questions.

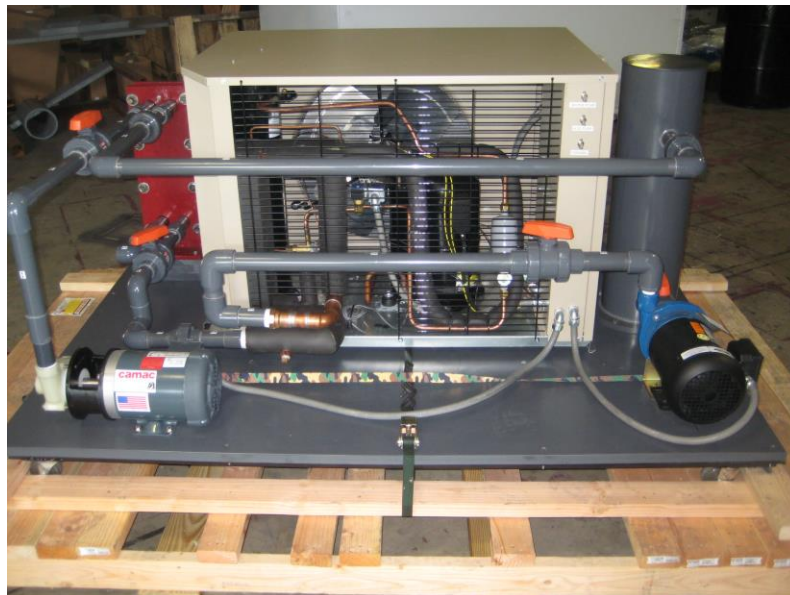

The WorkHorse Of The Industry™
CLYDESDALE
Pumps and Filters 

18 Gail Court, Sparta, NJ 07871 • 973-300-5575 • FAX 973-300-5576 www.camacindustries.com

THE LEADER IN CUSTOMER SERVICE **camac** INDUSTRIES